

## **DIP SWITCH 1-SYSTEM**

	Game Charge		1 coin 1 play	1 coin 2 plays	1 coin 3 plays	2 coins 1 play
	SW 1 SW 2	RIGHT HAND SELECTOR	OFF OFF	ON OFF	OFF ON	ON ON
	SW 3 SW 4	LEFT HAND SELECTOR	OFF OFF	ON OFF	OFF ON	ON ON
Special Purpose						
	SW 5 SW 6	MUST BE LEFT OFF	OFF OFF			
I	Cocktail/Upright		СТ	UP		
	SW 7 SW 8	CONTROL PANEL	OFF OFF	ON ON		

## **DIP SWITCH 2-GAME FEATURES**

Number Of Credited	3	4	5	Unlimited Lives
SW 1 SW 2	OFF OFF	OFF	OFF	ON
Bonus Points  SW 3 points required for	first 20,000 and every 40,000 OFF	30,000 50,000 ON	50,000 70,000 OFF	20,000 once only — ON
SW 4 bonus player	OFF	OFF	ON	ON
Difficulty	easy	regular	difficult	very
SW 5 SW 6	OFF	ON OFF	OFF ON	ON ON
Attraction Mode Sound SW 7	NO OFF		YES	
Hit Check Of Boomer SW 8	YES OFF		NO ON	

